

## WORLD HEADQUARTERS

#### Yorkville Sound

**CANADA** 

550 Granite Court Pickering, Ontario L1W-3Y8 CANADA

Voice: (905) 837-8481 Fax: (905) 837-8746

## U.S.A.

#### Yorkville Sound Inc.

4625 Witmer Industrial Estate Niagara Falls, New York 14305 USA


> Voice: (716) 297-2920 Fax: (716) 297-3689



Quality and Innovation Since 1963
Printed in Canada



# SERVICE MANUAL MANUEL de SERVICE

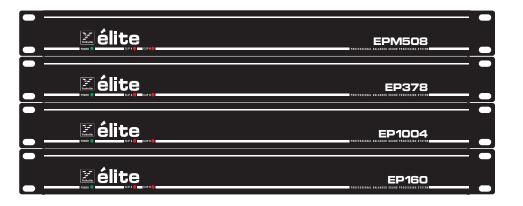

EP600

#### **IMPORTANT SAFETY INSTRUCTIONS**



#### INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

## **CAUTION:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

#### **Read Instructions:**

The *Owner's Manual* should be read and understood before operation of your unit. Please, save these instructions for future reference.

#### Packaging:

Keep the box and packaging materials, in case the unit needs to be returned for service.

#### Warning

When using electric products, basic precautions should always be followed, including the following:

### **Power Sources:**

Your unit should be connected to a power source only of the voltage specified in the owners manual or as marked on the unit. This unit has a polarized plug. Do not use with an extension cord or receptacle unless the plug can be fully inserted. Precautions should be taken so that the grounding scheme on the unit is not defeated.

#### Hazards:

Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious personal injury and serious damage to the product. Use only with cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer.

The apparatus should not be exposed to dripping or splashing water; no objects filled with liquids should be placed on the

Terminals marked with the "lightning bolt" are hazardous live; the external wiring connected to these terminals require installation by an instructed person or the use of ready made leads or cords.

No naked flame sources, such as lighted candles, should be placed on the apparatus.

#### **Power Cord:**

The AC supply cord should be routed so that it is unlikely that it will be damaged. If the AC supply cord is damaged **DO NOT OPERATE THE UNIT**.

#### Service:

The unit should be serviced only by qualified service personnel.

INSTRUCTIONS RELATIVES AU RISQUE DE FEU, CHOC ÉLECTRIQUE, OU BLESSURES AUX PERSONNES.

## AVIS:

N'ENLEVEZ PAS LE COUVERT (OU LE PANNEAU ARRIERE). NE CONTIENT AUCUNE PIECE REPARABLE PAR L'UTILISATEUR.

CONSULTEZ UN TECHNICIEN QUALIFIE POUR L'ENTRETIENT.

#### **Veuillez lire le manuel:**

Il contient des informations qui devraient êtres comprises avant l'opération de votre appareil. Conservez S.V.P. ces instructions pour consultations ultérieures

#### Emballage:

Conservez la boite au cas ou l'appareil devait être retourner pour réparation.

#### Warning:

Attention: Lors de l'utilisation de produits électrique, assurez-vous d'adhérer à des précautions de bases incluant celle qui suivent:

#### Alimentation:

L'appareil ne doit être branché qu'à une source d'alimentation correspondant au voltage spécifié dans le manuel ou tel qu'indiqué sur l'appareil. Cet appareil est équipé d'une prise d'alimentation polarisée. Ne pas utiliser cet appareil avec un cordon de raccordement à moins qu'il soit possible d'insérer complètement les trois lames. Des précautions doivent êtres prises afin d'eviter que le système de mise à la terre de l'appareil ne soit désengagé.

#### Hazard:

Ne pas placer cet appareil sur un chariot, un support, un trépied ou une table instables. L'appareil pourrait tomber et blesser quelqu'un ou subir des dommages importants. Utiliser seulement un chariot, un support, un trépied ou une table recommandés par le fabricant ou vendus avec le produit. Suivre les instructions du fabricant pour installer l'appareil et utiliser les accessoires recommandés par le fabricant.

Il convient de ne pas placer sur l'appareil de sources de flammes nues, telles que des bougies allumées.

L'appeil ne doit pas être exposé à des égouttements d'eau ou des éclaboussures et qu'aucun objet rempli de liquide tel que des vases ne doit être placé sur l'appareil.

Les dispositifs marqués d'une symbole "d'éclair" sont des parties dangereuses au toucher et que les câblages extérieurs connectés à ces dispositifs de connection extérieure doivent être effectivés par un opérateur formé ou en utilisant des cordons déjà préparés.

#### Cordon d'alimentation:

Évitez d'endommager le cordon d'alimentation. <u>N'UTILISEZ PAS</u>
<u>L'APPAREIL</u> si le cordon d'alimentation est endommagé.

#### Service:

Consultez un technicien qualifié pour l'entretien de votre appareil.

SAFE\_V4.doc Version 4.0 02/11/99 11:54 AM

#### ep600 Oct 26/2000

	ep600 Oct 26/2000	
YS No.	Description	Qty.
	RED 3MM LED 1V9 20MA W/STOP T&R	2
	GRN 3MM LED 1V7 20MA W/STOP T&R	1
	1N4148 75V 0A45 DIODE T&R 1N4004 400V 1A0 DIODE T&R	10
	1N4745A 16V0 1W0 ZENER 5% T&R	2
	MPSA63 TO92 PNP DARL T&R TA	2
6774	BD139 TO126 NPN TRAN TG	1
6926	BD140 TO126 PNP TRAN TG	1
	TL072CP IC FET DUAL OP AMP	10
	TLO74CN IC QUAD O/A T.I ONLY	2
	390P 50V 10%CAP T&R BEAD NPO	10
5205	_15N 100V 10%CAP T&R RAD .2"FLM	8
5226	_68N 100V 5%CAP T&R RAD .2"FLM 100N 100V 5%CAP T&R RAD .2"FLM	20
	150N 63V 10%CAP T&R RAD .2"FLM	4
	220N 63V 10%CAP T&R RAD .2"FLM	8
	330N 63V 5%CAP T&R RAD .2"FLM	4
5234	470N 63V 10%CAP T&R RAD .2"FLM	4
5240	680N 63V 10%CAP T&R RAD .2"FLM	4
	100U 25V 20%CAP T&R RAD .2"EL	4
	330U 25V 20%CAP BLK 10X13MM EL	2
4518	_10K LIN 12MM HORIZONTAL STP26	2
	1.5 MIL X 36" CLEAR POLY SHEETING	4
	CLIP 250X032 18-22AWG DISCO/INSL RING TERMINAL 18AWG WIRE & #8 SCREW	2
	250 MALE PCB TAB BULK CARTRIGE	2
	1/4" JCK PCB MT HORZ	6
	INTERNATIONAL PC MOUNT FUSEHOLDER	2
	0.100 AMP SLO-BLO .25X1.25 FUSE	1
3827	SQUARE BUMPER BUTTON BLACK	3
	BUTTON KNOB FLAT GREY	3
	ROTARY KNOB BLACK W/BLUE POINTER	2
	8' 3/18 SVT AC LINE CORD	1
	HEYCO #1150 STRAIN RELIEF	1
	4 CIR CABLE HOLDER .098 6-32 KEPS NUT ZINC	1
	22AWG SOLID SC WIR T&R JMP	53
	1.0W 1R 5%FLAME PROOF T&R RES	2
	1/4W 15R 5% T&R RES	2
4811	1/4W 68R 5% T&R RES	8
	1/4W 100R 5% T&R RES	4
4855	1/4W 330R 5% T&R RES	8
	1/4W 680R 5% T&R RES	8
4823		2
	1/4W 1K21 1% T&R RES	4
4988 4808		4 2
4847		3
6124		4
4774		4
4639		4
4870	1/4W 6K2 5% T&R RES	2
	1/4W 6K98 1% T&R RES	2
4810		2
	1/4W 9K760 0.1% *** T&R RES	8
	1/4W 10K0 1% T&R RES	18
	1/4W 12K 5% T&R RES 1/4W 15K 5% T&R RES	2
	1/4W 15K 5% T&R RES 1/4W 17K40 0.1% *** T&R RES	2
	1/4W 20K 5% T&R RES	6
	1/4W 30K 5% T&R RES	3
4941	1/4W 30K 5% .2"U T&R RES	1
	1/4W 33K 5% T&R RES	2
	1/4W 100K 5% T&R RES	2
	1/4W 1M 5% T&R RES	4
	_7" 4C-26 AWG RIBBON CABLE 0.1"	1 10
	20GA C.R.STEEL PRESHEAR 32X48X.038 20GA COLD ROLLED STEEL 4X8' SHEET	1.18 0.57
	18GA COLD ROLLED STEEL 4X8 SHEET	1.42
	.025" FISHPAPER ( FLAT 48" SHEETS )	0.52
	6-32 X 3/8 PAN PH TAPTITE JS500	1
8829	6-32 X 3/8 FLAT PH TAPTITE BO#4 HEA	14
	10-32 X 1/4 PAN PH TAPTITE JS500	2
	YORKVILLE PRODUCT SCHEMATIC	1
	NYLON WASHER #8 0.062	1
	#10 SPLIT LOCK WASHER BO	2
	DPDT PUSH SW PCMT H BREAK B4 MAKE PROCESSOR PC MOUNT CE 220/125V XFMR	3
1242	FINOCESSOR FO WOUNT GE 220/125V XFMK	1

